



RIDE88 U-TRACK INSTALLATION FOR RIVIAN R1T

1.

Carefully remove the 4 plastic caps and bolts that run along the top front of the bed. RIVIAN bolts will not be used for U-track installation.

Be careful when removing the plastic caps not to bend the metal cups. It is easy to catch the metal cup with a screwdriver and bend it accidentally.




2).

IMPORTANT:


CAREFULLY align and hand thread all bolts. DO NOT use power tools to start threading. Be sure not to cross thread any bolts or force them if they are not threading smoothly. Use your hand to thread in the bolts gently until almost fully seated. Next use a 10mm socket (no socket wrench) and hand thread the bolts all the way in. Once fully threaded in you can tighten the bolts down using a socket wrench. DO NOT OVER TIGHTEN. If you feel the thread is not turning easily or suddenly gets tight during hand threading, back out the bolt to avoid getting it stuck. Check for any damage to threads and clear any dirt etc. Never force the bolt in if it starts to bind. Contact INFO@RIDE88.COM for a replacement bolt if necessary.

ASSEMBLE IN THE ORDER BELOW

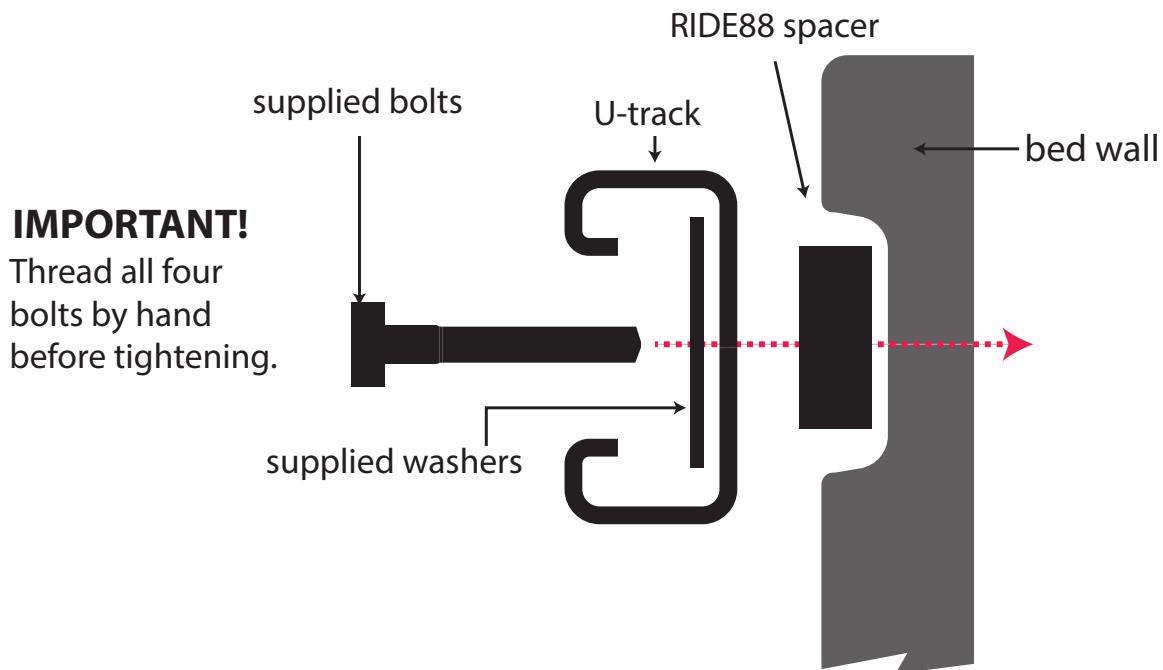

3).

Install Single Mounts upside down as shown below if you have a RIVIAN tonneau cover. This will allow clearance to open and close the cover when racks are folded down. If you do not have the tonneau cover, mount right side up.

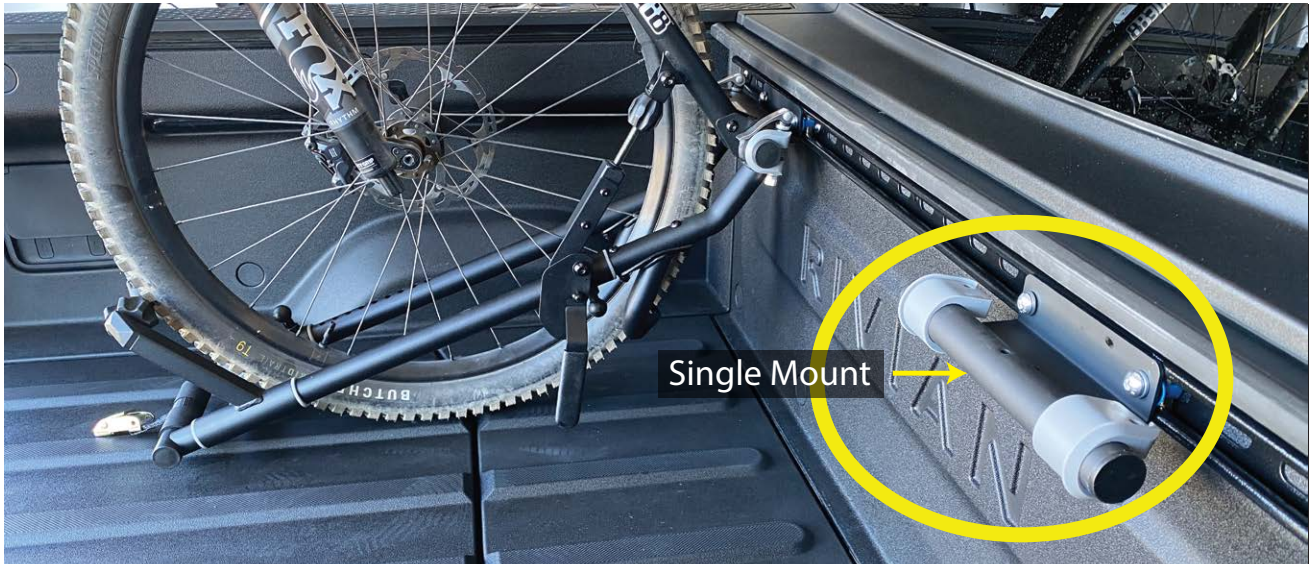


The parts shown below are not used for the RIVIAN installation. Save for another application or discard.



3/8" bolts will be snug when passing through the holes on the Single Mount. You can turn them through with a 7/32" allen wrench before mounting to the U-track.




SINGLE MOUNT ATTACHMENT ORDER

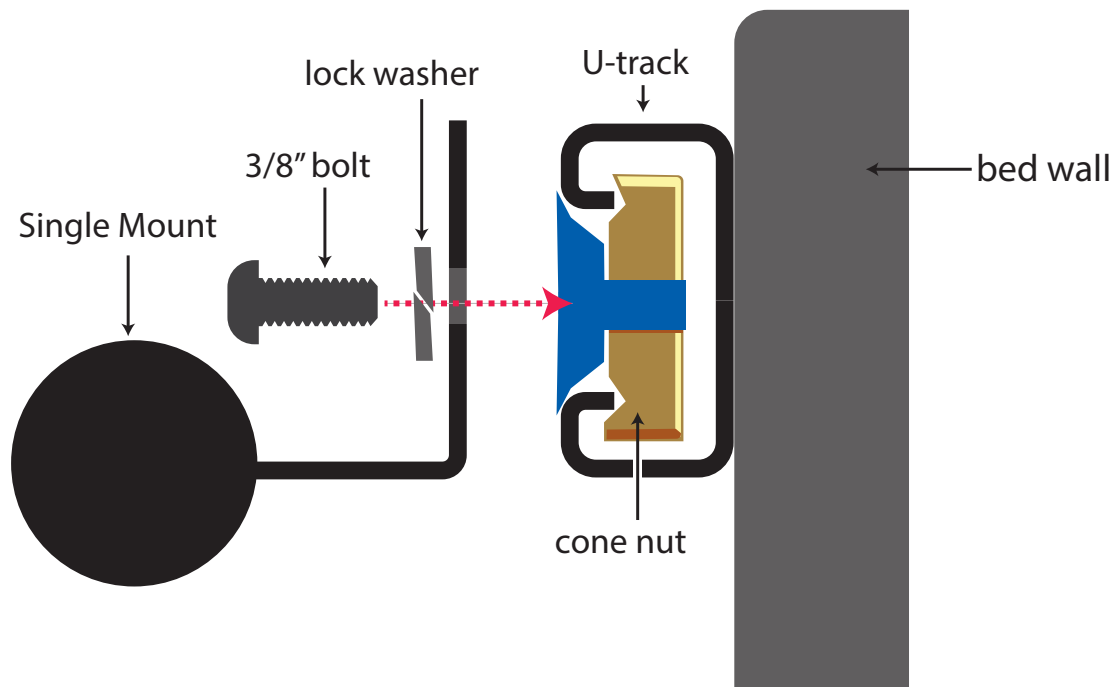

CONE NUT:
push in and rotate 90 degrees

correct position

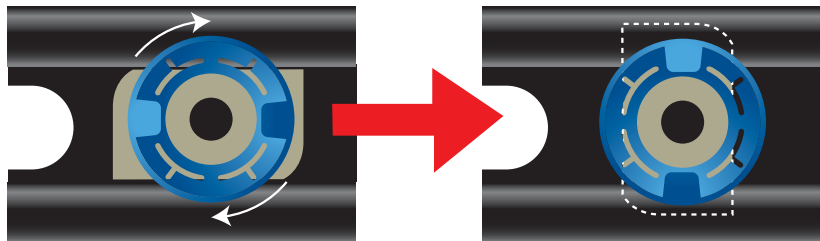

4).

Now you are ready to assemble your racks. Refer to the videos below for assembly of your racks. Also watch the important BIKE INSTALLATION video for proper use of the rack system.

Type black text into your web browser:

RACK ASSEMBLY: <https://youtu.be/jkuvb7Wvt90>

BIKE INSTALLATION: https://youtu.be/Le_7Mp2jjgk?t=223

**IMAGES
COURTESY
OF OUR
AWESOME
CUSTOMERS!**



RIDE88™